


## Syrup adapter for JURA J8

### Sweet latte (prepared with syrup attachment)

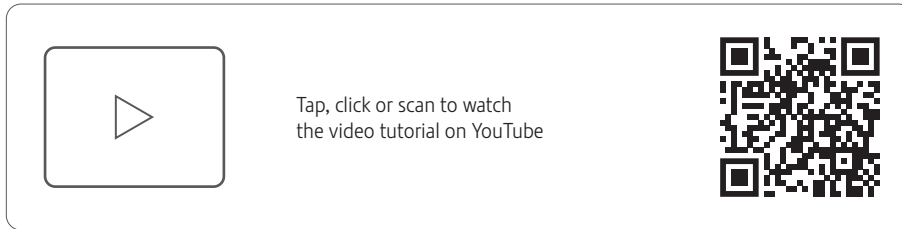

The sweet latte is a speciality coffee with sweet milk foam. To make this speciality, use the syrup attachment provided.

- i** All speciality coffees with milk can also be prepared with **sweet milk foam**. To do this, use the syrup attachment provided and before starting preparation, select the Speciality Selection 'S'.

**Precondition:** Milk is connected to the fine foam frother.

- ▶ Remove the cover from the syrup attachment.



- ▶ Fill the syrup attachment with syrup. Fill it to the first, second or third mark depending on the desired sweetness.
- ▶ Close the syrup attachment.
- ▶ Touch 'Sweet Latte'.  
*'Please connect the syrup attachment, ensuring it is filled with syrup'*
- ▶ Remove the lower part of the fine foam frother.



- ▶ Connect the syrup attachment to the fine foam frother.



- ▶ Turn the setting wheel of the fine foam frother to the 'Milk Foam' position.
- ▶ Place a cup under the fine foam frother.
- ▶ Touch 'Next'.  
The preset amounts of coffee and milk foam flow into the cup.  
*'Please remove the syrup attachment'*
- ▶ Remove the syrup attachment and rinse it thoroughly under running water.
- ▶ Touch 'Next'.

- i** **8 minutes** after preparation, the milk system is **automatically** rinsed. Therefore always place a receptacle under the fine foam frother after preparing milk.

To ensure that the fine foam frother always works properly, you must clean it **daily** when you have been preparing milk (see chapter 7 'Main-tenance – Cleaning the milk system').